


WARING PRO[®]

CONVECTION TOASTER OVEN

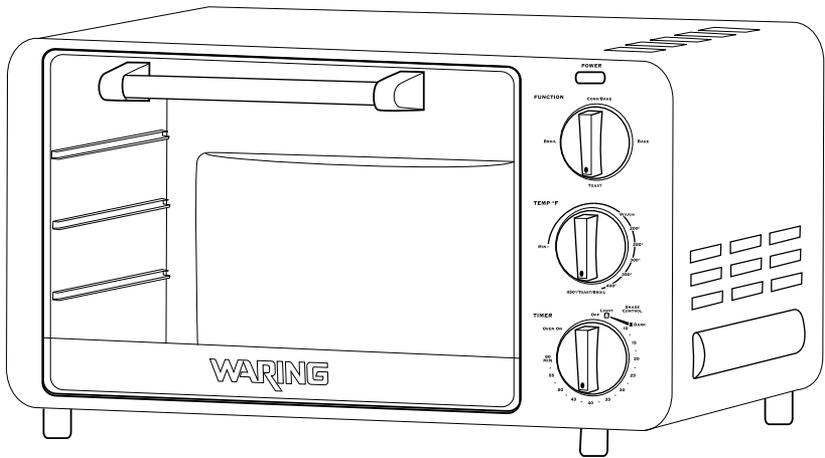

TCO600

For your safety and continued enjoyment of this product,
always read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

SAVE AND READ THESE INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1. READ ALL INSTRUCTIONS.**
2. Always unplug from outlet prior to handling or cleaning.
3. Do not touch hot surfaces. Always use oven mitts/handles or knobs when handling hot materials and allow metal parts to cool before cleaning. Allow the unit to cool thoroughly before putting in or taking off parts, or before moving it.
4. When the unit is not in use and before cleaning, unplug the Convection Toaster Oven from the wall outlet. Note: Make sure the oven is turned off before unplugging.
5. To protect against risk of electrical shock, do not immerse cord, plug, or any parts of the oven in water or other liquids.
6. Close supervision is always necessary when this or any appliance is used near children. This appliance is not for use by children.
7. Do not operate this or any appliance with a frayed or damaged cord or plug or after the appliance malfunctions or is dropped or has been damaged in any manner. Return the Convection Toaster Oven to the nearest Authorized Waring® Service Center for examination, repair or electrical or mechanical adjustment.
8. Do not use attachments not recommended by the manufacturer; they may cause fire, electrical shock or personal injury.
9. Do not use outdoors or for commercial purposes.
10. Do not use this appliance for other than its intended use.
11. Do not let the cord dangle over the edge of a tabletop or countertop or touch hot surfaces.
12. Do not place the appliance near a hot gas or electric burner or in a heated oven.
13. Extreme caution should be used when using containers constructed of material other than metal or glass.
14. A fire may occur if the Convection Toaster Oven is covered or touching flammable materials, including curtains, draperies, wall, etc., when in operation.

Do not store any items on top of the appliance when in operation.

15. When using Convection Toaster Oven, pull the unit out a minimum of 6 inches away from the wall or other cords.
16. Do not store any materials, other than manufacturer's recommended accessories, in this unit when not in use.
17. Do not place any flammable materials in oven, such as paper, cardboard, plastic or any similar materials that may catch fire or melt.
18. Do not cover the crumb tray or any part of the oven with metal foil. This will cause overheating. Foil can be used to cover approved cooking containers.
19. Oversized foods or metal utensils must not be inserted in the appliance as they may create a fire or risk of electrical shock.
20. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, involving a risk of electrical shock.
21. When broiling, use extreme caution when removing pan or disposing of hot grease.
22. To turn this appliance off, return all controls to the OFF position.
23. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
24. To disconnect, turn any control to OFF, then remove plug from wall outlet.
25. Extreme caution must be used when moving an appliance containing oil or other hot liquids.

**SAVE THESE INSTRUCTIONS
FOR HOUSEHOLD USE ONLY**

Short Power Supply Cord Instructions


A short power supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. An extension cord may be used if care is exercised in its use. If an extension cord is used, the electrical rating of the cord must be at least as great as the electrical rating of the appliance. The extension cord should be arranged so that it will not drape over the countertop or tabletop, where it can be pulled on by children or tripped over unintentionally.

For Products Purchased in the United States and Canada Only

To reduce the risk of electrical shock, this appliance has a polarized plug (one blade is wider than the other). This plug fits a polarized outlet only one way; if the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

PARTS

Learning About Your Countertop Oven

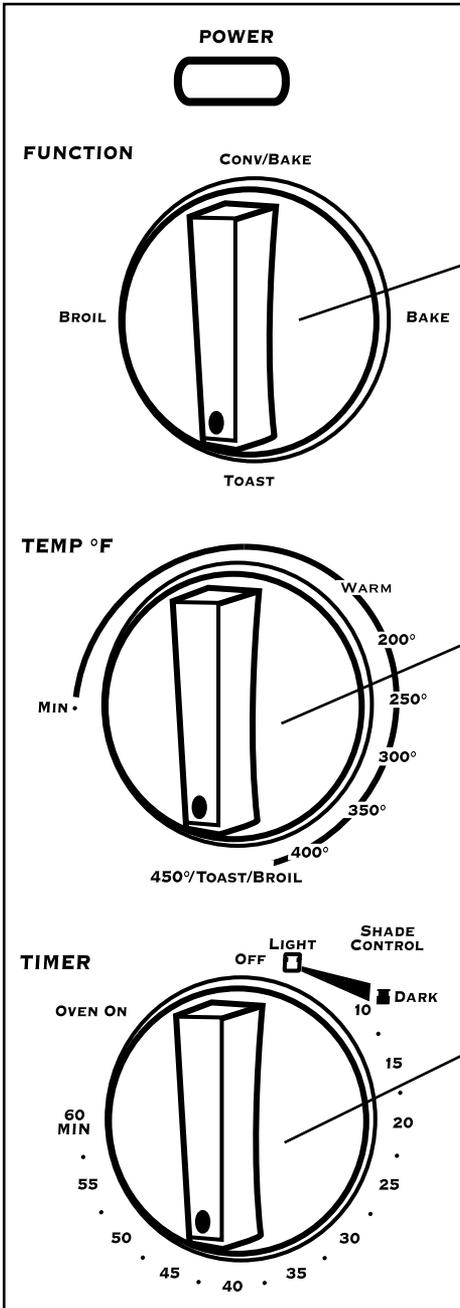


1. **Function Selector Dial** – Select cooking function by turning knob to desired setting.

2. **Temperature Control Dial** – Adjust the thermostat to the desired temperature.

3. **Timer Control Dial with Bell Signal** – Set cooking time up to 60 minutes. Will automatically turn the oven off at the end of the cooking time. To turn oven off, turn Timer knob to OFF position.

PARTS CONTINUED

4. **Removable Internal Crumb Tray** – Located at the bottom of the oven. Collects crumbs and fallen food particles. Pulls out for easy cleaning.
5. **Reversible Oven/Broil Rack** – See “Positioning Rack” section (page 8).
6. **Tempered Glass Door** – For front viewing of food.
7. **Three Rack Levels** – To accommodate a variety of foods.
8. **Baking Pan** – Use for all your baking and roasting needs. Attaches to Oven/Broil rack to broil.
9. **Pizza Fit Capacity** – Fits most large 12-inch (30 cm) frozen pizzas.

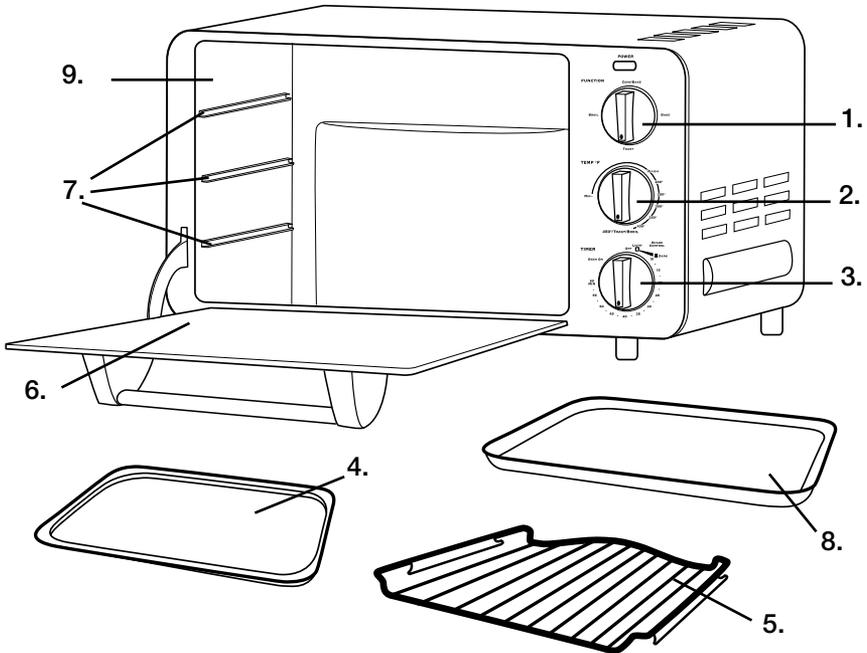

OPERATING INSTRUCTIONS

Preparing To Use Your Convection Toaster Oven for the First Time

If you are using your Convection Toaster Oven for the first time, please be sure to:

- Remove any stickers from the surface of the oven.
- Open oven door and remove all printed documents and paper from inside the Convection Toaster Oven.
- Clean the oven rack and baking pan with hot water, a small amount of dishwashing liquid and non-abrasive cleaning pad.
- Do not immerse the body of the unit in water or dishwashing liquids.
- Dry the unit thoroughly before using.
- Select a location for the Convection Toaster Oven. The location should be in an open area on a flat counter where the plug will reach an outlet.
- Plug the Convection Toaster Oven into a 120-volt outlet.

We recommend a “trial run” at a high temperature to familiarize yourself with your oven and to eliminate any protective substance or oil that may have been used for packing and shipping. Set the Temperature control to 400 (degrees), the Timer control to 15 minutes and the Function control to Bake to activate the oven heating element. After the first 10 minutes, switch the Temperature control to 450/Broil to activate the upper and lower heating elements. A small amount of smoke and odor may be detected in your oven during this trial run. This is normal.

Warning: When the Convection Toaster Oven is in use or cooling down, please be sure there is a 6-inch (15cm) clearance between the Convection Toaster Oven and any other surface, including cords. Be sure the cord is not resting against the back of the Convection Toaster Oven.


ASSEMBLY INSTRUCTIONS

Positioning Rack

To accommodate a wide variety of foods, the oven has three rack positions (see figure below).

Positioning of the rack will depend on the size of the food and desired browning. Before removing the rack, allow unit to cool.

Please note: For best toast and pizza results, position the rack facing up.

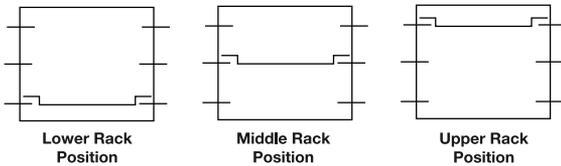

To Use the Toast/Bagel Function

- Step 1. Position the rack on the middle rack guide, facing up.
- Step 2. Place items on rack; place bagels cut-side up.
- Step 3. Close glass door completely.
- Step 4. Turn the Function dial to TOAST.
- Step 5. Turn the Timer past the 20-minute mark then back to desired toast time anywhere between the Toast symbols.
- Step 6. When toasting is complete, open door completely and remove food.

Note: No preheat is necessary for toast function.

Red power light may cycle on and off during toast function.

To Use the Convection Bake Function

Preheat oven for 5 to 7 minutes at desired temperature with oven rack in place.

- Step 1. Place rack in oven in middle or lower position. Position rack up or down, depending on the size of the item(s) you are cooking. For pizza, place rack facing up.
- Step 2. Place food on baking pan and place pan on rack in oven.
- Step 3. Turn the Function dial to CONV/BAKE.
- Step 4. Turn the Timer dial to desired cook time.
- Step 5. When baking is complete, open door completely and remove food.
- Step 6. To turn oven off, turn timer knob to OFF position.

To Use the Bake Function

Preheat oven for 5 to 7 minutes at desired temperature with oven rack in place.

- Step 1. Place baking pan with food inside on wire rack.
- Step 2. Close glass door completely.
- Step 3. Turn the Function dial to BAKE.
- Step 4. Turn the Timer dial to desired cook time.
- Step 5. When baking is complete, open door completely and remove food.
- Step 6. To turn oven off, turn Timer knob to OFF position.

To Use the Broil Function

- Step 1. Turn the Function dial to Broil.
- Step 2. Attach baking pan to base of oven/broil rack by sliding the pan under the rack to fit into the metal brackets on the sides.
- Step 3. Place food on rack and slide broiling assembly into upper rack guides in oven.
- Step 4. Leave door open about one-half inch while broiling.
- Step 5. When broiling is complete, open door completely and remove food.

Note: It is not necessary to preheat oven on Broil function.

WARNING: Cooked food and metal rack can be very hot; handle with care. Do not leave Convection Toaster Oven unattended.

Special note: If cook time is less than 20 minutes, you must turn Timer past the 20-minute mark then back to desired time.

To turn oven off, turn Timer knob to OFF position.

FAQs ABOUT CONVECTION BAKING

What is Convection?

Answer: In your Convection Toaster Oven there is a built-in fan that circulates the hot air in the oven chamber to better heat the food.

How do I adjust the time for Convection?

Answer: On average, convection will shorten the cooking time by 30%, but it varies by food and it is suggested to go with a shorter cooking time to start with and then add time if it is needed.

What are the best foods to use with Convection?

Answer: While a shorter cook time is often desirable, baked goods in particular benefit from convection cooking as the circulating air keeps oven temperature consistent throughout.

Tips for Cooking Pizza

- Step 1. Oven rack should be on upper rack guide, position C, facing up.
- Step 2. Set Function dial to CONV/BAKE.
- Step 3. Set Temperature dial to 400°F.
- Step 4. Set Timer control to desired time (Toaster oven will cook faster than large conventional ovens. It is suggested to cut back the time by 20%. Add more time if needed.)

CLEANING AND MAINTENANCE

Cleaning Your Countertop Oven

- Step 1. Turn knobs to OFF position, then unplug unit and let it cool.
- Step 2. Wipe unit down with damp cloth. DO NOT IMMERSE IN WATER. Make sure to only use mild, soapy water.
- Step 3. Remove crumb tray by pulling out of Convection Toaster Oven.
- Step 4. Shake off crumbs from crumb tray. Cleaning the crumb tray often will avoid any accumulations.
- Step 5. Wash the oven rack, bake tray, broil pan and crumb tray in hot, sudsy water. Oven crumb tray is located on inside bottom of oven. Note: These parts are not dishwasher safe. Please hand wash and dry.

Storing Your Countertop Oven

Allow the appliance to cool completely before storing. If storing the Convection Toaster Oven for long periods of time, make certain that the Convection Toaster Oven is clean and free of food particles. Store the Convection Toaster Oven in a dry location, such as on a table or countertop or cupboard shelf. Other than

the recommended cleaning, no further user maintenance should be necessary.

Any other servicing should be performed by an authorized service representative.

HELPFUL TIPS / TROUBLESHOOTING		
Problem	Potential Cause	Solution
<ul style="list-style-type: none"> Overcooked /undercooked foods 	<ul style="list-style-type: none"> Incorrect Temperature or Time setting Rack placement 	<ul style="list-style-type: none"> You may have to adjust the time and temperature to desired taste. Because your Convection Toaster Oven is smaller than your regular oven, it will heat up faster and generally cook in shorter periods of time. Refer to “Positioning Rack” section, page 7.
<ul style="list-style-type: none"> Burnt smell 	<ul style="list-style-type: none"> Food buildup inside oven, on heating elements or in crumb tray. 	<ul style="list-style-type: none"> Refer to “Cleaning Your Convection Toaster Oven” section, page 9.
<ul style="list-style-type: none"> Oven does not turn on. 	<ul style="list-style-type: none"> Unit is unplugged. Timer was not turned past 20-minute mark. 	<ul style="list-style-type: none"> Plug the Convection Toaster Oven into a 120-volt AC electrical outlet. Set Timer knob and Temperature knob to desired setting. Both must be turned on to operate the Convection Toaster Oven.
<ul style="list-style-type: none"> Only one heating element is heating up. 	<ul style="list-style-type: none"> Function setting selection determines which heating element will operate. 	<ul style="list-style-type: none"> Check to see if Broil setting is selected.
<ul style="list-style-type: none"> Heating elements do not stay on. 	<ul style="list-style-type: none"> Heating elements will cycle on and off to maintain proper heat. 	<ul style="list-style-type: none"> Confirm Function setting is the correct one of choice.
<ul style="list-style-type: none"> Oven is in operation and then it shuts off. 	<ul style="list-style-type: none"> This oven is protected by a high-limit thermostat for overheat protection. 	<ul style="list-style-type: none"> Let unit cool down and then reset for Baking/ Broiling function.

Phone Customer Service at 1-800-492-7464 if further assistance is needed.

Any trademarks or service marks of third parties herein
are the trademarks or service marks of their respective owners.

©2011 Conair Corporation
Waring Products
Division of Conair Corporation
150 Milford Road
East Windsor, NJ 08520

www.waringpro.com

Printed in China
TCO600 IB

11WR124270

IB-9230B