

# WARING PRO<sup>®</sup>

## PROFESSIONAL CITRUS JUICER



### PCJ Series

For your safety and continued enjoyment of this product,  
always read the instruction book carefully before using.

# TABLE OF CONTENTS

Important Safeguards ..... 2

Grounding Instructions..... 4

Assembly Instructions ..... 4

Parts ..... 5

Operating Instructions..... 6

Cleaning Instructions..... 6

Specifications..... 6

**IMPORTANT: Always unplug the Waring Pro® Professional Citrus Juicer from outlet when assembling and disassembling.**

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1. READ ALL INSTRUCTIONS**
2. To protect against risk of electrical shock, do not put the Waring Pro® Professional Citrus Juicer base housing in water or other liquids.
- 3. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning.**
4. Close supervision is necessary when any appliance is used by or near children.
5. Avoid contact with moving parts.
6. Do not operate any appliance with a damaged cord or plug, or after the unit malfunctions or is dropped or damaged in any manner. Return it to the nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by Waring may cause fire, electric shock, or injury.


8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Be sure to turn switch to OFF position after each use of your juicer. Make sure the motor stops completely before disassembling.
11. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage, always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.

**NOTE:** The motor of your juicer has a thermal protection device. If the motor overheats for any reason, the protector will cut off the electrical current and the motor will stop thus saving the machine from possible damage or fire.

**CAUTION:** The protector will reset automatically after cooling. In this case, please turn the unit OFF to ensure that when the protector resets itself, the citrus juicer will not turn on unexpectedly.

**SAVE THESE INSTRUCTIONS  
FOR HOUSEHOLD USE ONLY**

# GROUNDING INSTRUCTIONS

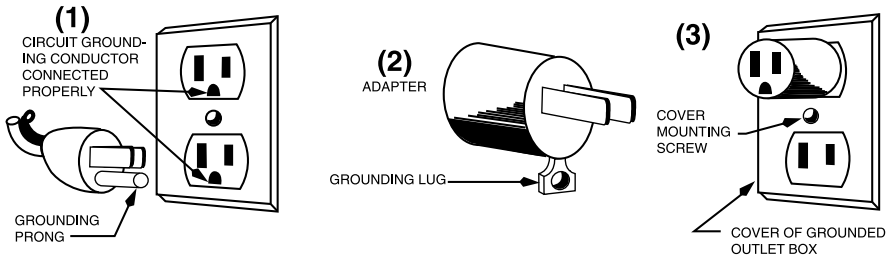

For your protection, Waring Pro® Citrus Juicers are equipped with a 3-conductor cordset that has a molded 3-prong grounding-type plug, and should be used in combination with a properly connected grounding-type outlet as shown in Figure 1.

If a grounding-type outlet is not available, an adapter, shown in Figure 2, may be obtained so that a 2-slot wall outlet can be used with a 3-prong plug. Referring to Figure 3, the adapter must be grounded by attaching its grounding lug under the screw of the outlet cover plate. **CAUTION:** Before using an adapter, it must be determined that the outlet cover plate screw is properly grounded. If in doubt, consult a licensed electrician. Never use an adapter unless you are sure it is properly grounded.

This appliance is for 120 volts only and should not be used with a converter.


Note: Use of an adapter is not permitted in Canada.

# ASSEMBLY INSTRUCTIONS

- Choose desired spout position and place bowl so that it rests flat on top of base.
- Place reamer-strainer inside of bowl and turn until it rests into motor drive coupling.

# PARTS

- 1. Reamer-Strainer
- 2. Juice Bowl with Spout
- 3. Base
- 4. On/Off Switch

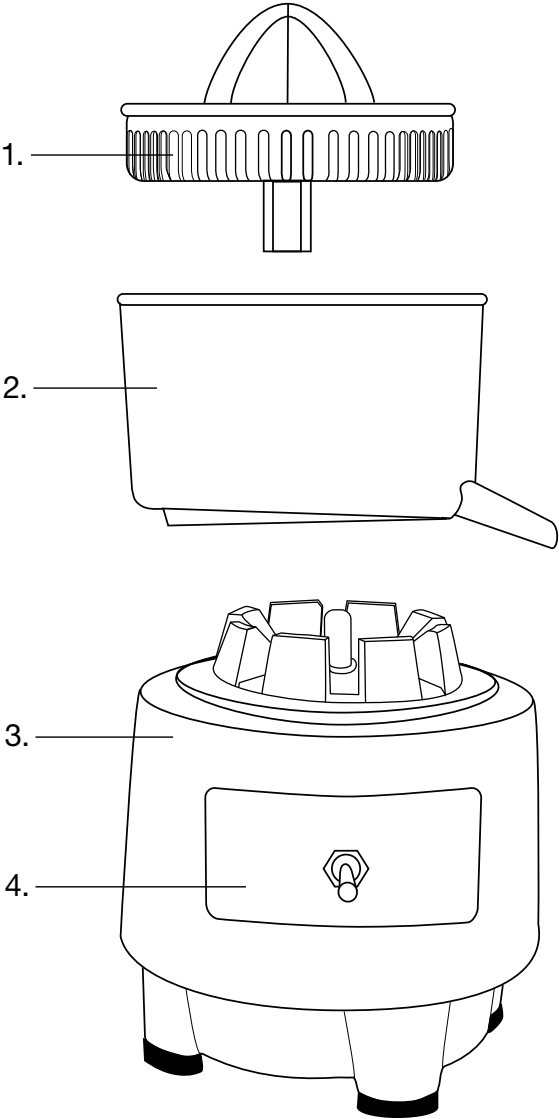

## OPERATING INSTRUCTIONS

- With power cord unplugged, assemble all parts per assembly instructions.
- Plug power cord into appropriate electrical outlet.
- Set switch to ON position and allow a few seconds for motor to reach full speed.
- Place halved citrus fruit on rotating reamer and push down firmly.
- Set switch to OFF position when finished juicing.

CAUTION: Keep fingers from contact with rotating reamer-strainer.

## CLEANING AND MAINTENANCE

- Always unplug appliance before performing any cleaning or maintenance operations.
- Clean juicer immediately after each use and prior to initial use as follows:
- Remove reamer-strainer and bowl from base.
- Rinse reamer-strainer and bowl thoroughly under running water. Wash with warm, soapy water and rinse thoroughly, or place on top rack of dishwasher.
- Wipe external surfaces of motor housing with a soft cloth or sponge, dampened with water. **DO NOT IMMERSE BASE IN WATER.**
- Allow all parts to air dry and reassemble.

Any other servicing should be provided by an authorized service representative.

## SPECIFICATIONS

Model	PCJ201, PCJ218
Power Requirements	120V AC, 60 HZ
Power Consumption	1.25 Amps



**Any trademarks or service marks of third parties herein are  
the trademarks or service marks of their respective owners.**

**©2012 Waring Consumer Products  
150 Milford Road  
East Windsor, NJ 08520**

**[www.waringpro.com](http://www.waringpro.com)**

**Printed in U.S.A.  
Made in U.S.A.**

**PCJ Series IB  
12WR137583**