


WARING PRO[®]

PROFESSIONAL CORDLESS WINE OPENER

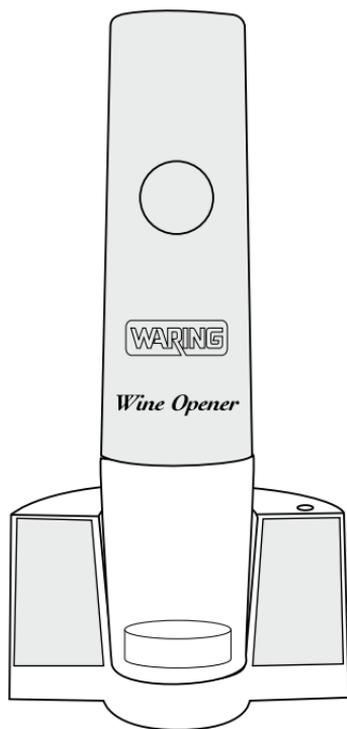

WO40

For your safety and continued enjoyment of this product,
always read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. READ ALL INSTRUCTIONS
2. Do not operate wine opener with a damaged cord or plug, after the appliance malfunctions or if it has been dropped or damaged in any manner. Return appliance to the nearest Authorized Service Center or phone Waring Customer Service at 800-492-7464 for examination, repair or electrical or mechanical adjustment.
3. To protect against risk of electrical shock, do not put the wine opener in water or other liquids. This may cause personal injury and/or damage to the product.
4. To protect against fire, do not operate in the presence of explosive and/or flammable fumes.
5. Do not use the wine opener for other than intended use.
6. This product is intended for normal domestic household use only.
7. When using or recharging the wine opener, keep your workspace clean and free from potential hazards.
8. For indoor use only. Do not expose the wine opener or charging base to rain or other extreme conditions.
9. Never force the wine opener onto a bottle or attempt to speed up the mechanism. The wine opener will work best when it is operated at its intended speed.
10. Do not touch or adjust the wine opener's mechanism or the corkscrew spiral. Hold the wine opener by its upper housing only.
11. Do not attempt to open bottles if the power button is not working correctly.
12. Do not attempt to open the wine opener or the charging base. It has no user-serviceable parts. Charge the wine opener only with the charging base and power adapter supplied. Use only the power adapter with 9VDC/80mA output as supplied with this product.
13. Never remove the plug from the socket by pulling the power cord.

14. Use of attachments not recommended or sold by Waring may cause fire, electrical shock, injury or damage to the product.
15. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage, always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
16. This appliance should not be used by adults or children whose lack of experience, product knowledge or disability might cause a hazard, unless they have been correctly instructed and are adequately supervised.
17. Children should always be supervised to ensure that they do not play with this product.
18. Do not place the appliance on or near a hot gas or electric burner or in a heated oven.

CAUTION: Corkscrew is sharp. Handle carefully. Keep hands and utensils out of the corkscrew cuff while operating to prevent the possibility of severe personal injury and/or damage to the product or property.

FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS

PARTS

1. Brushed stainless upper housing

2. Cork eject switch


3. Charging light

4. Charging base

5. Foil cutter

6. Power adapter

7. Corkscrew cuff

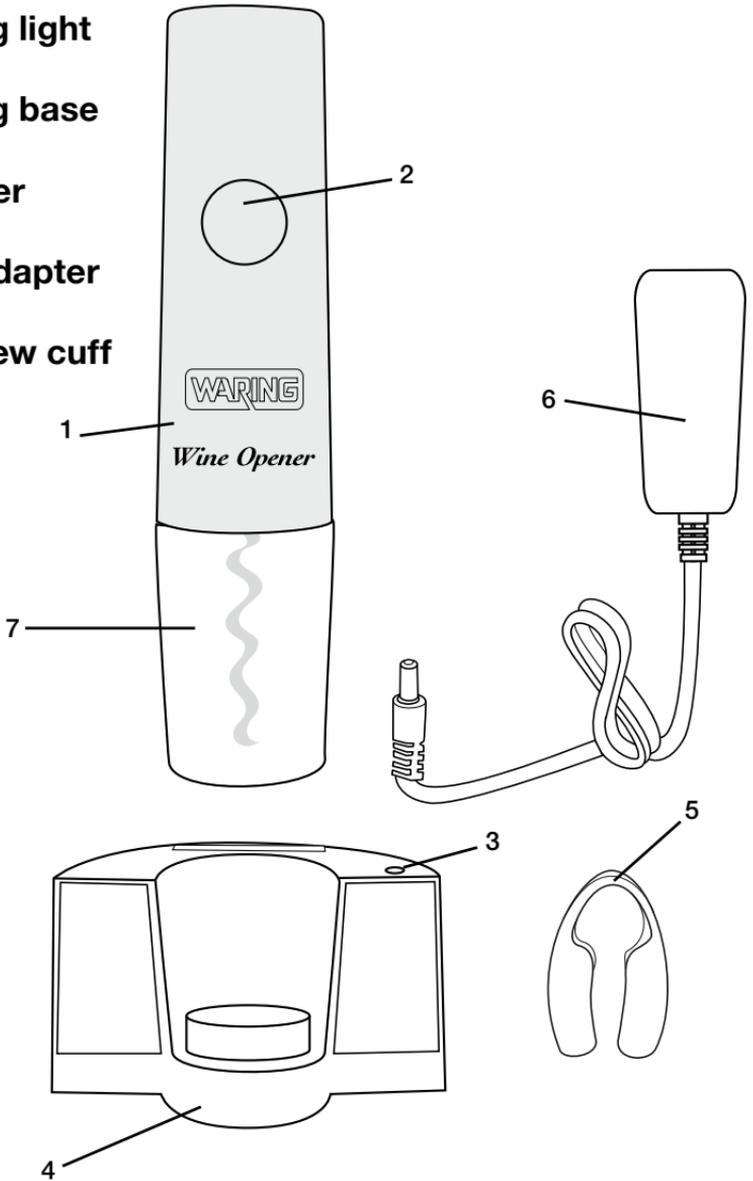

OPERATING INSTRUCTIONS

Connection and Use

We recommend that you charge your wine opener for at least 12 hours before using for the first time. Please follow the instructions for charging as stated below:

This appliance is for 120 volts only and should not be used with a converter.


Charging Your Wine Opener

Plug one end of the adapter cord into the base of the charging base and the other end into an electrical outlet. Place the wine opener in the charging base, making sure that it is firmly in position and that it is fully engaged. The charging light will turn on, indicating that the unit is charging. It will take approximately 10–12 hours to charge your wine opener.

Your wine opener can open approximately 50 bottles of wine on a full charge.

Foil Cutter

For your convenience, this unit has a removable foil cutter, which is stored in the base of the unit. Before removing the cork, you must remove any foil from the bottle (see fig. 1). Attach foil cutter to the top of the wine bottle. Keep hand on lower part of bottle and turn foil cutter in twisting motion to cut foil. Remove foil to expose top part of cork surface.

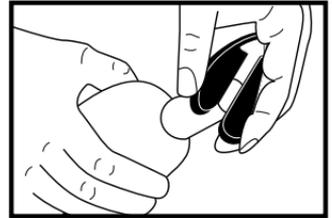


(fig. 1)

CAUTION: Blade on foil cutter is sharp. Please keep fingers away from cutter's sharp edges.

To Operate Your Wine Opener

1. Place the wine opener on top of the wine bottle, making sure that it remains as straight/upright as possible at all times. If you hold the wine opener at an angle to the bottle it will not remove the cork properly (see fig. 2).

(fig. 2)

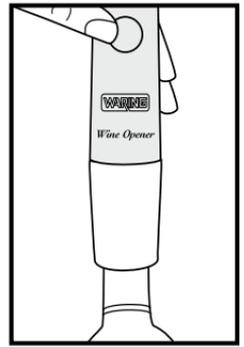


2. Holding the upper housing of the wine opener firmly, press down onto the top of the bottle. The automatic corkscrew spiral will start turning in a counterclockwise direction, penetrating the cork and lifting it up and out of the bottle. The mechanism stops when the cork is full removed.

3. Lift the wine opener off the bottle and press the cork eject switch on the upper housing of the wine opener; the automatic corkscrew spiral turns in a clockwise direction to release the cork (fig. 3).

4. Always return the wine opener to the charging base when done. This will protect the unit while not in use.

(fig. 3)

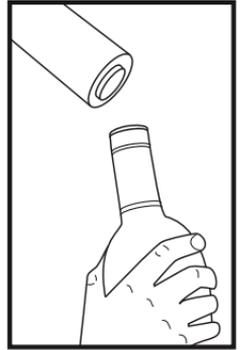

CLEANING AND MAINTENANCE SECTION

1. Use only a soft dry cloth to clean the exterior of the unit.
2. DO NOT submerge the wine opener in water or clean underneath the corkscrew cuff.
3. This product is not a toy. Keep out of reach of children.
4. Always unplug the appliance from the main outlet before cleaning.
5. Make sure all the parts are clean and dry before storing.
6. To clean housing, wipe with a clean, damp cloth.
7. Never immerse power adapter, charging base or housing in water or any other liquid.
8. Never submerge the motor base in water or other liquids, or place in a dishwasher.

Any other servicing should be performed by an authorized service representative.

©2012 Waring Consumer Products
150 Milford Road
East Windsor, NJ 08520

www.waringpro.com

Printed in China
WO40 IB
12WR129438

IB-11222